

FIBER DROP CADDY

FEATURES:

- Fiber coil easily attaches to caddy:
 - ONE carabiner included
- Can handle up to 1500' fiber drops!
- Lightweight
 - 28lbs empty
 - 51lbs with a 1000' drop
- Easy to Store
- Different spool sizes allow individuals to fit most coil sizes.

OPTIONS:

- Small - *Non-Adjustable*
 - 5" Spool
- Medium - *Adjustable*
 - 10", 10 3/4", and 11 1/2" Spool
- Large - *Adjustable*
 - 12 3/4", 13 3/4", 14 3/4", 15 3/4" Spool

Spools are sold separately and are interchangeable



Ordering Information

U-TECK™

Your Safety... Our Solutions.

✉ info@UTECK.com / 1-800-542-7011

FIBER DROP CADDY:

Small
Medium
Large

DESCRIPTION:

5"
10", 10.75", 11.5"
12.75", 13.75", 14.75", 15.75"

VPN:

59016-S
59016-M
59016

FIBER DROP CADDY

FEATURES:

- Fiber coil easily attaches to caddy:
 - ONE carabiner included
- Can handle up to 1500' fiber drops!
- Lightweight
 - 28lbs empty
 - 51lbs with a 1000' drop
- Easy to Store
- Different spool sizes allow individuals to fit most coil sizes.

OPTIONS:

- Small - *Non-Adjustable*
 - 5" Spool
- Medium - *Adjustable*
 - 10", 10 3/4", and 11 1/2" Spool
- Large - *Adjustable*
 - 12 3/4", 13 3/4", 14 3/4", 15 3/4" Spool

Spools are sold separately and are interchangeable



Ordering Information

U-TECK™

Your Safety... Our Solutions.

✉ info@UTECK.com / 1-800-542-7011

FIBER DROP CADDY:

Small
Medium
Large

DESCRIPTION:

5"
10", 10.75", 11.5"
12.75", 13.75", 14.75", 15.75"

VPN:

59016-S
59016-M
59016

FIBER DROP CADDY *INSTRUCTIONS*



Remove the spool from caddy frame by sliding the spool assembly out.



DO NOT remove the ties or plastic packaging until the coil is attached to the caddy and ready to use.



Determine the inside diameter of the fiber cable to be used.



There are pre-determined positions by which the spool can be adjusted.



Slide the spacers to the desired spool diameter by removing the thumb screw and reinserting in the desired position.



Attach the inside of the coil to the spool by using the carabiner (*included*) or tie wraps (*not included*).



Reinsert the loaded spool into the caddy frame.



The payout direction is indicated inside the frame.



Level surfaces recommended, but the pivoting feet allow use on uneven surfaces.

FIBER DROP CADDY *INSTRUCTIONS*



Remove the spool from caddy frame by sliding the spool assembly out.



DO NOT remove the ties or plastic packaging until the coil is attached to the caddy and ready to use.




Determine the inside diameter of the fiber cable to be used.



There are pre-determined positions by which the spool can be adjusted.



Slide the spacers to the desired spool diameter by removing the thumb screw and reinserting in the desired position.

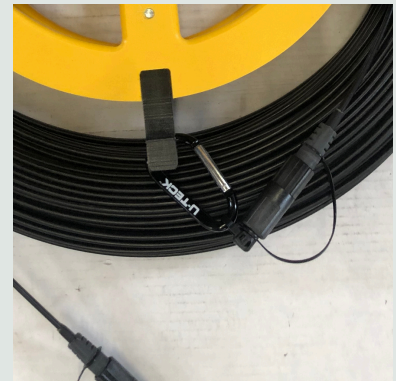

Attach the inside of the coil to the spool by using the carabiner (*included*) or tie wraps (*not included*).



Reinsert the loaded spool into the caddy frame.



The payout direction is indicated inside the frame.



Level surfaces recommended, but the pivoting feet allow use on uneven surfaces.